



Lafer Executive and Recliner Assembling Instructions

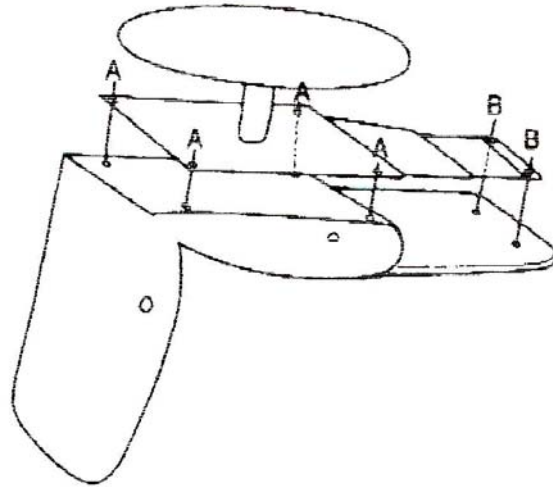

Base assembly:

- A. Attach the base to the upholstered body with 4 nuts that are provided.
- B. Attached the footrest frame extension to the upholstery front extension with 2 screws that are provided

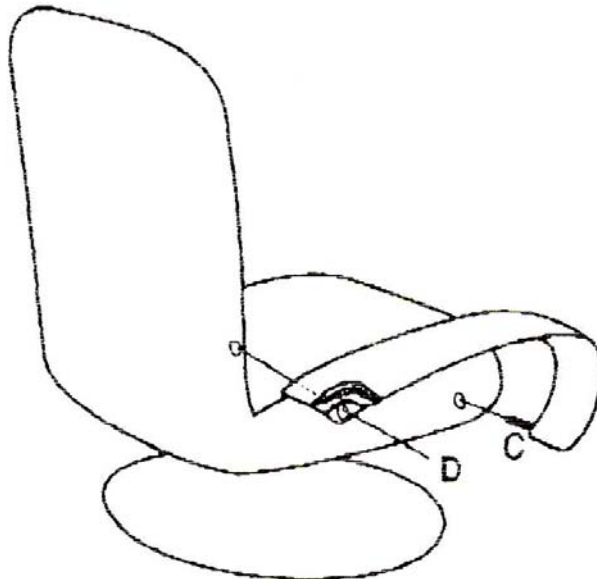

Armrests assembly:

- C. Insert the armrest front pin in its casing until it clicks.
- D. Open the armrest rear end zipper to disclose bolt. Attach it to the backrest frame.

Note: added Executive chair instructions. Seat height adjustments: Pull up on the lever (located at the right hand side under the seat) to unlock the vertical movement and select desired height.

Note 2: To freely operate the footrest, the seat must be at least one inch above the lowest possible level.